


Radio/Stereo: Service and Repair

RADIO REPLACEMENT

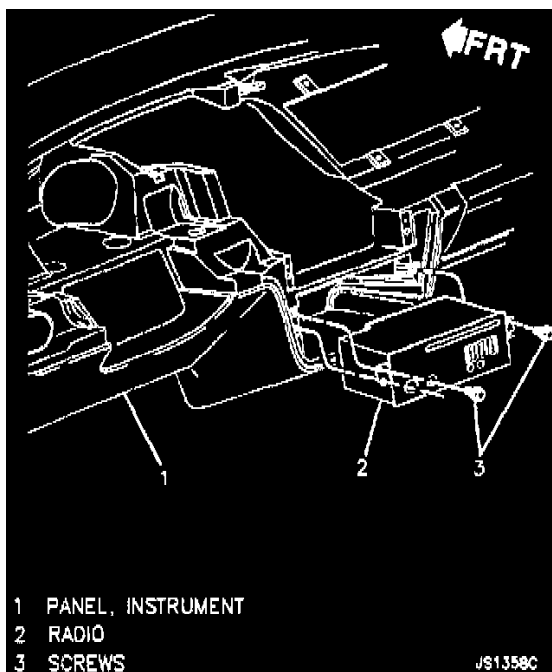

Description

REMOVE OR DISCONNECT

1. Disable SIR system.
2. Negative battery cable.
3. I/P cluster trim plate.
4. Screws and pull rearward.
5. Electrical and antenna lead connections.

INSTALL OR CONNECT

1. Electrical and antenna lead connections.
2. Screws to I/P.
3. I/P cluster trim plate.
4. Negative battery cable.
5. Enable SIR system.